



Global Water
 Sensors Samplers Systems
 11267 Coloma Rd. Colma Reservoir, Ca USA
 (916) 638-3429 FAX (916) 638-3270


B

C

D

2 Wire Current Diagram


The output of the sensor is current and has to be read with the multimeter in current mode.

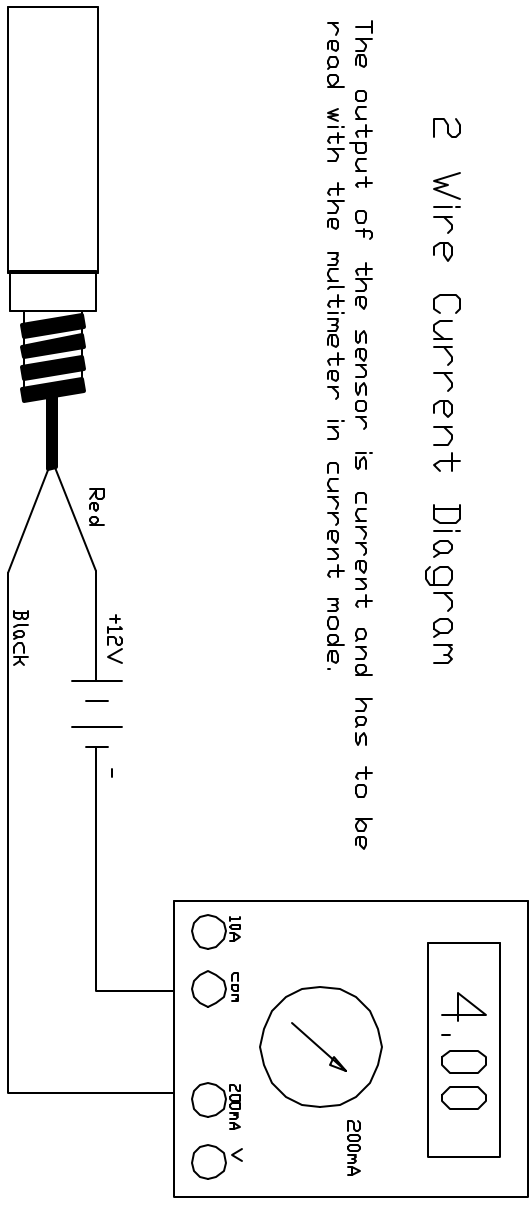

1

2 Wire Voltage Diagram

In order to measure with meter in volts mode, you need to provide a voltage drop resistor. A resistance of 125 ohms will provide .5 to 2.5 volts from the sensors 4-20 mA output.

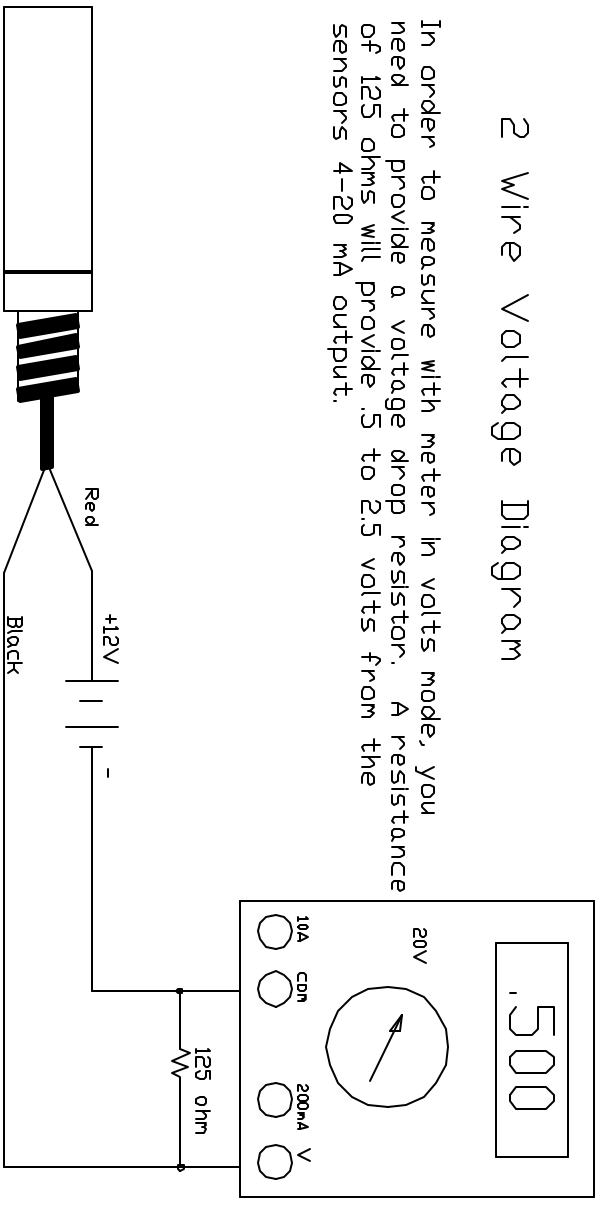

3

4

A

B

C

D

Title			
2 wire sensor measurement diagram			
Size	Number	Rev	
A	Z00007	A	
Date	3/27/02	Drawn by XTH	
File:	Z00007.dwg	Sheet 1 of 1	

4

2