


INSTRUCTIONS TO SWITCH ON THE AUTONOMOUS GSM

I M P O R T A N T : F O L L O W P O I N T S 1 – 6 (!!!)



1) You receive the equipment almost built. Only the ANTENNA and the LITHIUM BATTERIES are disconnected.

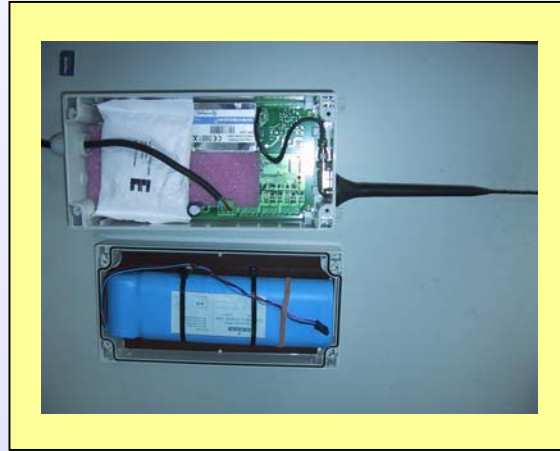


2) THREAD the ANTENNA into its base. Unscrew the four screws and find the battery connector.



3) Pull the SIM door with a screwdriver to place your local SIM chip into.



4) Put the SIM chip into the modem.

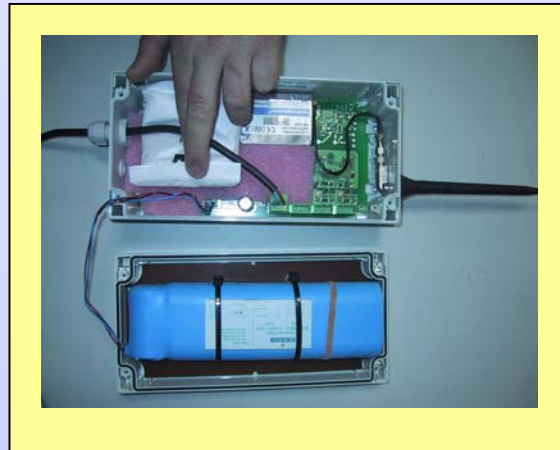

5) Connect the BATTERIES to the battery connector by firmly pushing the connectors together.



6) Close the package and screw down everything in a “zigzag” pattern.