


AD200-4 and AD200-1 Voice Autodialers

Autodialers for Easy Voice Alarming

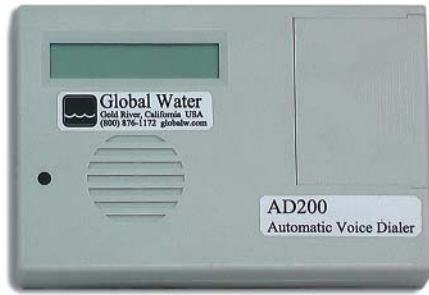

Description

Global Water's AD200 Voice Alarm Autodialers provide cost-effective notification of emergency conditions such as high water levels, equipment failures, and security breaches. For applications without a land line, see the CP200 accessory, which adds a cellular interface for remote AD200 applications.

Multiple and Single Alarm Models

The AD200-4 accepts 4 alarm inputs and will store and dial up to eight numbers, including numbers for standard (voice) phones, most cell phones, and pagers. For single alarm applications, the low-cost AD200-1 accepts one alarm input and will dial up to four phone and pager numbers. When either model senses an alarm, it begins to dial out, sending your own pre-recorded alarm messages—voice messages to your phone list and numeric codes to your pager list.

Easy Operation

The AD200 dialer is easy to program via the on-board keypad, LCD display, and built-in speaker. Any NO (normally open) or NC (normally closed) contact or low voltage input may be used to trigger the AD200; including float switches, door switches, water sensors, and motion detectors (see Ordering & Options below).

Flexible Power

The AD200-1 includes provision for backup power via a standard 9 volt battery. For the AD200-4, we offer an optional auto-charge battery pack that will maintain operation for up to 24 hours in the event of an extended power failure. Both models include an AC adapter for normal operation.


Specifications

Enclosure Type	Indoor
Power	9 to 18 VDC (AC adapter included)
Number of Inputs	AD200-4: Four AD200-1: One
Battery Backup	AD200-4: Original battery pack AD200-1: 9VDC battery (not included)
Activation	Dry contact: NO or NC, momentary or continuous Voltage: 0 to +V (NC) or +V to 0 (NO), 5 to 28 VDC
Phone Number Storage	AD200-4: Up to 8 AD200-1: Up to 4
Maximum Digits	28 (including up to 10 pauses)
Dimensions	6 x 4 x 1.5" (15.2 x 10.2 x 3.8 cm)
Optional Enclosure Dimensions	12 x 10 x 6" (30 x 25 x 15 cm)
Weight	0.8 lb (.4 kg)

Features

- Records your own voice message for each alarm input
- Calls up to eight numbers in any combination of telephones or pagers
- Sends voice message to phones or numeric code to pagers
- Easy to install and program
- Non volatile memory protects program against power failures
- Programmable exit and entry delay
- Internal 9V battery backup (AD200-1)
- Three-year limited warranty
- 1/8 DIN front panel mount enclosure

Applications

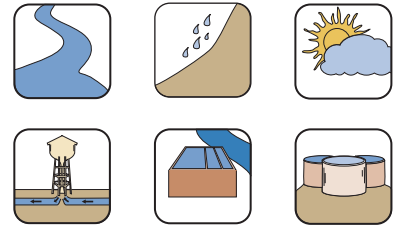

Ideal for cost-effective notification of emergency conditions such as high water levels, equipment failures, and security breaches for a variety of applications.

Ordering & Options

Autodialers

Order No.	Inputs	Dial Out
AD200-4	4	8 Ph/Pgr
AD200-1	1	4 Ph/Pgr

Accessories

Order No.	Description
AD200-BKUP	Backup Power Pack for AD200-4
AD200-AC	Extra AC Adapter
AD200-DS	Door Switch, heavy duty magnetic
FE1000	Optional Enclosure
WA600	Water Alarm Sensor
WA100	Float Switch



Global Water
The Leader in Water Instrumentation

In the U.S. call toll free
at 1-800-876-1172
International: 916-638-3429
Fax: 916-638-3270
Email: globalw@globalw.com

Visit our online catalog at:
www.globalw.com
Our Address:
11390 Amalgam Way
Gold River, CA 95670