


CVD-2000 Cellular Autodialer

Wireless security alarm systems for easy voice alarming

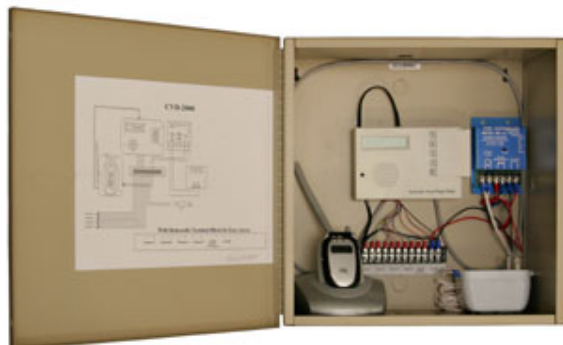

- Alarm notification anywhere there is cell phone service
- Fast, simple installation
- No cell phone contract required
- Includes up to 400 minutes of prepaid cellular service
- Weather resistant enclosure included

Description

Perfect for Residential, Commercial or Industrial applications, the CVD-2000PS Cellular Autodialer is designed for direct, immediate notification of emergency situations. Because the cellular autodialer doesn't require a land line, you can install it wherever it is needed and call out using a cellular connection. The compact and rugged Cellular Autodialer is easy to install and configure. The Cellular Autodialers operate on AC power, but are rechargeable battery capable for remote monitoring locations where power is not available. The cellular autodialer includes everything you need to start using the system, including the AD200-4 autodialer, cellular phone, 400 prepaid minutes good for one year, and AC adapter, so you can rest assured that if something happens, you will be notified. Note: Prepaid service is through AT&T Wireless. The cellular autodialer only works where AT&T provides wireless service.

The CVD-2000PS Cellular Autodialers are easy to program via the on-board keypad, LCD display, and built-in speaker. Any NO (normally open) or NC (normally closed) contact or low voltage input may be used to trigger the cellular autodialers, including float switches, door switches, water sensors, and motion detectors.

Cellular Autodialer Applications

Applications for the CVD-2000PS cellular autodialer include monitoring construction sites, lift stations, remote water pumping sites, trailers, any site without land lines, and many others.

Specifications

Communications: Standard cellular phone w/AT&T wireless service
Power: AC adapter included (Optional rechargeable 12VDC battery)
Number of Inputs: Four
Activation Dry contact: NO or NC, momentary or continuous
Voltage: 0 to +V (NC) or +V to 0 (NO), 5-28 VDC
Phone Number Storage: Up to 8
Maximum Digits: 28 (including up to 10 pauses)
Enclosure Dimensions (LxHxD): 14x14x8in (35.5x35.5x20.3cm)
Weight: 17.0 lb (7.7 kg)

Options and Accessories

CVD-2000PS Cellular Autodialer w/service
 Includes the AD200-4 autodialer, cellular phone, 400 prepaid minutes good for one year, and AC adapter.

CVD-2000P Cellular Autodialer w/o service
 Includes the AD200-4 autodialer, cellular phone, and AC adapter. Requires purchase of a cellular plan and SIMM card. Recommended for non-US clients.

00-010 12V 5AH Rechargeable Battery
 Approximate battery life under normal conditions, 12 hrs.

BC100 Smart Charger

SP101 Solar Panel (2 W, 80mA min.)

SP102 Solar Panel (5 W, 300mA min.)

Contact
 Global Water
 for all your
 instrumentation
 needs.

Water Level

Water Flow

Water Samplers

Water Quality

Weather

Remote Monitoring

Control



Global Water

a xylem brand

In the U.S. call toll free
 at 1-800-876-1172
 International: 1-979-690-5560
 Fax: 1-979-690-0440
 Email: globalw@globalw.com

Visit our online catalog at:
www.globalw.com
 Our Address:
 11390 Amalgam Way
 Gold River, CA 95670